
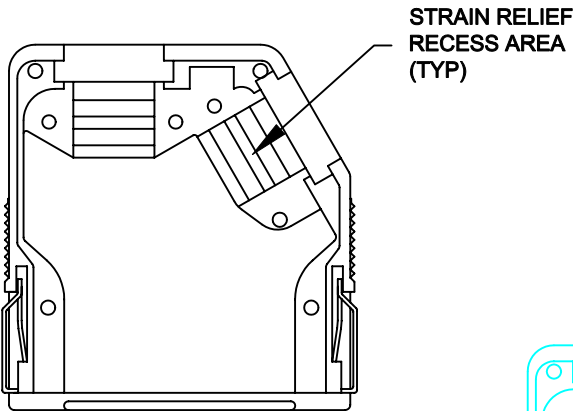


NOTES:


- 1. 2-ENTRY = 9, 15 & 25 POSITION BACKSHELLS
- 2. 3-ENTRY = 37 POSITION BACKSHELL

SEE INTERNAL DIMENSION DRAWINGS FOR GENERAL LAYOUT

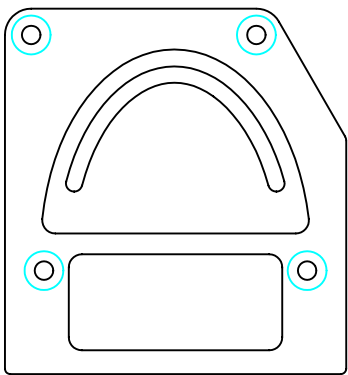


ASSEMBLY INSTRUCTIONS:

1. PREPARE CABLE ENDS, CONNECT TO CONNECTOR
2. SELECT THE CABLE ENTRY PORT NEEDED, PLACE THE SLOT BLOCKING TABS IN THE OTHER POSITIONS MAKING SURE THEY ARE FULLY SEATED
3. PLACE CABLE IN SELECTED STRAIN RELIEF RECESS AREA MAKING SURE CABLE JACKET IS BELOW STRAIN RELIEF. ENSURE THE CABLE IS PRESSED INTO THE STRAIN RELIEF RECESS AREA
4. PLACE CABLE CLAMP OVER CABLE. USING SCREWS PROVIDED, TIGHTEN CABLE CLAMP. CABLE CLAMP MAY BE INSTALLED UP SIDE DOWN FOR SMALLER CABLES
5. PLACE THE OTHER HALVE OF THE HOOD ON TOP OF THE FIRST HALF, MAKING SURE NO WIRES ARE PINCHED
6. TIGHTEN THE TWO HALVES TOGETHER WITH THE SCREWS PROVIDED

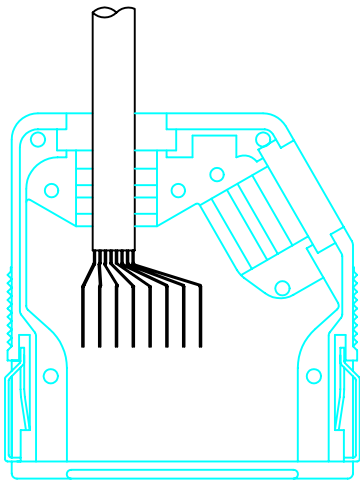

ITEM No. 3

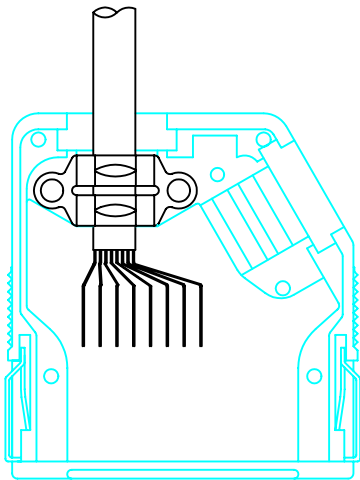



ITEM No. 3




STRAIN
RELIEF
SCREW



MOUNTING
SCREW



STRAIN
RELIEF
CLAMP



CABLE SLOT
BLOCK TAB

RoHS COMPLIANT



PLASTIC

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	DRAWN: C. SMITH		DATE: 03-27-06		
		CHECKED:		DATE:		
	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	SCALE: N.T.S.	SHEET 1		OF 3	REV 0
		NorComp				

NOTES:



- 1. 2-ENTRY = 9, 15 & 25 POSITION BACKSHELLS
- 2. 3-ENTRY = 37 POSITION BACKSHELL

SEE INTERNAL DIMENSION DRAWINGS FOR GENERAL LAYOUT

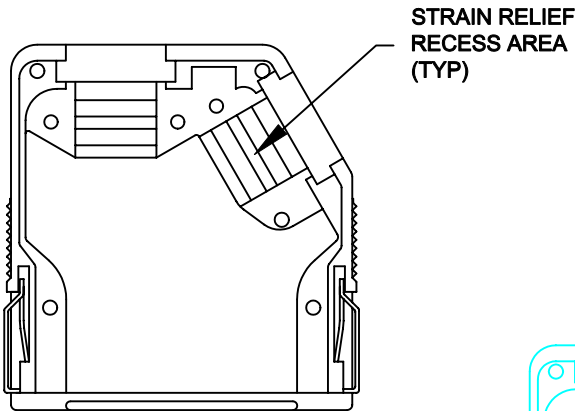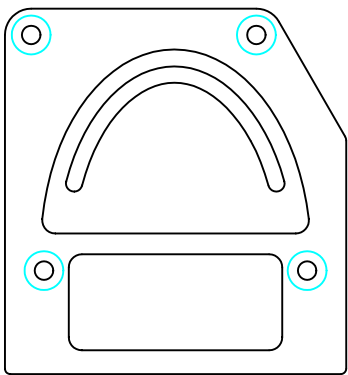




ASSEMBLY INSTRUCTIONS:

1. PREPARE CABLE ENDS, CONNECT TO CONNECTOR
2. SELECT THE CABLE ENTRY PORT NEEDED, PLACE THE SLOT BLOCKING TABS IN THE OTHER POSITIONS MAKING SURE THEY ARE FULLY SEATED
3. PLACE CABLE IN SELECTED STRAIN RELIEF RECESS AREA MAKING SURE CABLE JACKET IS BELOW STRAIN RELIEF. ENSURE THE CABLE IS PRESSED INTO THE STRAIN RELIEF RECESS AREA
4. IF CABLE IS SHIELDED, FOLD SHIELD AND/OR GROUND WIRE BACK OVER THE CLAMP AREA. CUT ANY EXCESS WIRE SO IT WILL NOT STICK OUT OF THE HOOD
5. PLACE CABLE CLAMP OVER CABLE. USING SCREWS PROVIDED, TIGHTEN CABLE CLAMP. CABLE CLAMP MAY BE INSTALLED UP SIDE DOWN FOR SMALLER CABLES
6. PLACE THE OTHER HALF OF THE HOOD ON TOP OF THE FIRST HALF, MAKING SURE NO WIRES ARE PINCHED
7. TIGHTEN THE TWO HALVES TOGETHER WITH THE SCREWS PROVIDED

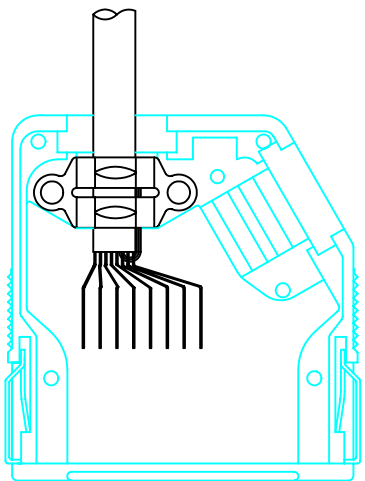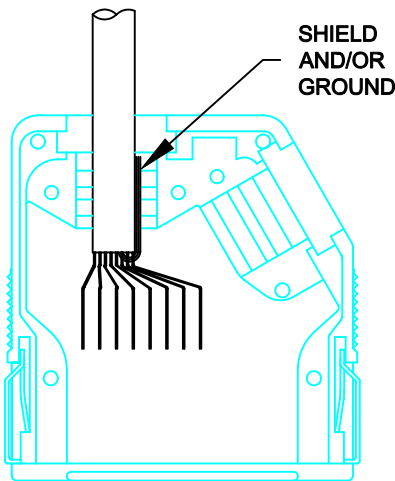

ITEM No. 3 & 4

ITEM No. 5



STRAIN
RELIEF
SCREW

MOUNTING
SCREW

STRAIN
RELIEF
CLAMP

CABLE SLOT
BLOCK TAB

RoHS COMPLIANT


METALIZED
PLASTIC

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	DRAWN: C. SMITH		DATE: 03-27-06	
		CHECKED:		DATE:	
NorComp		SCALE: N.T.S.	SHEET 2 OF 3		REV 0
		DWG NO. BACKSHELL - 955 SERIES			

NOTES:


- 1. 2-ENTRY = 9 POSITION BACKSHELL
- 2. 3-ENTRY = 15, 25 & 37 POSITION BACKSHELLS

SEE INTERNAL DIMENSION DRAWINGS FOR GENERAL LAYOUT

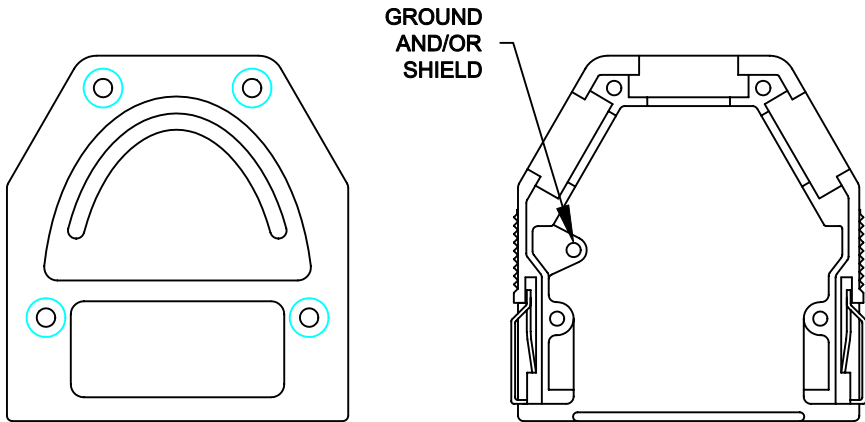


ASSEMBLY INSTRUCTIONS:


1. SLIDE CABLE INTO CABLE CLAMP, DO NOT TIGHTEN CLAMP COVER AT THIS TIME
2. PREPARE CABLE ENDS, CONNECT TO CONNECTOR
3. SELECT THE CABLE ENTRY PORT NEEDED, PLACE THE SLOT BLOCKING TABS IN THE OTHER POSITIONS MAKING SURE THEY ARE FULLY SEATED
4. PLACE CONNECTOR AND CABLE CLAMP INTO POSITION, MAKING SURE CABLE JACKET IS BELOW CABLE CLAMP TIGHTEN CABLE CLAMP COVER
5. IF CABLE IS SHIELDED, INSTALL RING TYPE WIRE TERMINAL ONTO SHIELD AND/OR GROUND WIRE. CONNECT RING TERMINAL ONTO HOOD WITH SCREW PROVIDED
6. PLACE THE HOOD COVER ON TOP OF THE HOOD, MAKING SURE NO WIRES ARE PINCHED
7. TIGHTEN THE TWO HALVES TOGETHER WITH THE SCREWS PROVIDED

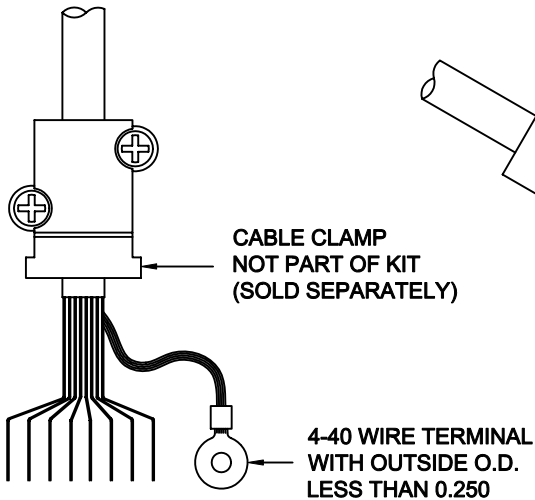

ITEM No. 1, 2 & 5

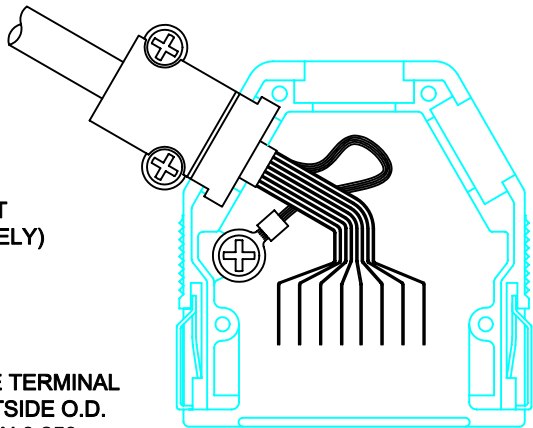

ITEM No. 3, 4 & 5

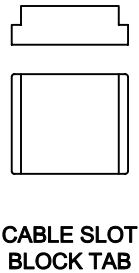

RoHS COMPLIANT

DIE CAST

	THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF NorComp AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OF SALE OF APPARATUS WITHOUT WRITTEN PERMISSION.	DRAWN: C. SMITH		DATE: 03-27-06	
		CHECKED:		DATE:	
NorComp		SCALE: N.T.S.	SHEET 3 OF 3		REV 0
		DWG NO. BACKSHELL - 955 SERIES			